

Safety Information

Before using and operating the earphones, please read and follow the below precautions to ensure the best performance of the device and to avoid dangerous or illegal situations.

- Listening to sound at a high volume may permanently damage your hearing.
- When you use earphones to listen to music or calls, it is recommended to use the minimum volume required for music or calls to avoid damaging your hearing.
- Exposure to high-level volume while driving, your attention may be distracted and cause

Operating environment

- Do not use the device in dusty, sharp, compact areas or near magnetic fields to avoid failure of e internal circuit of the device.
- · When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- · Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipmen ilure or electric shock hazard.
- Please use the device within a temperature range of -10 ° C ~ + 55 ° C, and store the device and its cessories within a temperature range of -40C ~ + 70 ° C. When the ambient temperature is to igh or too low, it may cause device function failure.
- When the temperature is below 5 ° C, the performance of the battery is limited.
- Do not place the device in direct sunlight, such as the window sill or the dashboard of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters wens, water heaters, stoves, candles, or other places that may generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, otherwis the metal objects may damage the device and/or cause injury to you.

- This device and its accessories may contain some small parts. Keep the device and its accessorie ut of children's reach.
- Children may inadvertently damage the device and its accessories, or swallow small parts. causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery eakage excessive fire or explosion
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery.
- Do not replace the battery yourself to avoid damage to the battery or device.

Charger safety

- When charging the device, the power socket should be installed near the device and should be easily accessible
- When charging is completed or not charging, disconnect the charger from the device and unplug the charger from the power outlet.

Precautions

The earphones should be stored in a dry well ventilated environment and avoid contact with il, water vapor, steam, moisture and dust to prevent the performance of the product.

. Avoid using harsh organic solvents or items containing these ingredients to clean the

The earphones should be used correctly according to the requirements, and pay attention to the effect of the environment on the product. Make sure the connection is smooth and we commend a distance between the earphones and device of 10-15 meters

. If the earphones fail to connect or have poorly connection, please do not dismantle them or he accessories privately

- . When charging the earphones, please use the charger specified by our company.
- To ensure the normal use of the earphones, please make sure they are fully charged.