 


User's Manual EN

Product Introduction

- 1 Haipa
- 2 Dust bin
- 3 LED light
- 4 Power switch
- 5 Air outlet
- 6 Handle
- 7 Charging port

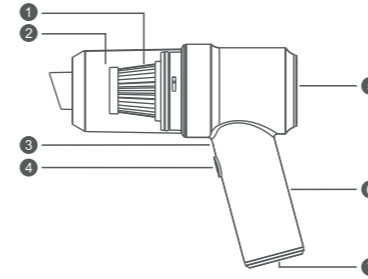

What's Included




*This manual is a general guide, and specific accessories are subject to the purchase configuration

How To Use

- 1 Plug in the charging cable or use the charging base to give your vacuum a full battery boost.
- 2 Connect the right attachments based on your cleaning needs.
- 3 Gently press the power switch to start your vacuum cleaner.

*Look out for the indicator:
Red: it's charging
Blue or green: fully charged and ready to roll!

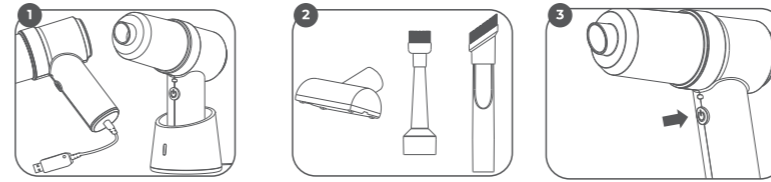


Remember: Use a 5V 2A adapter or car charger for the best charging experience. Don't forget, the power adapter needs to be provided by you.

Installation and Use of Accessories


1 Suction Nozzle:

Perfect for cleaning dust in tight spots like doors, seats, cabinets, corners, drawers, and ashtrays.

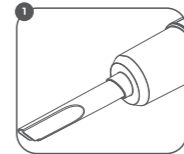


2 Brush:

This multitasker sucks up and wipes away dust. Great for cleaning cushions, footpads, keyboards, and air outlets.

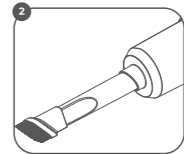


3 Floor Brush:

Ideal for sweeping up dust on floors, in trunks, on mattresses, sofas, and large flat surfaces.

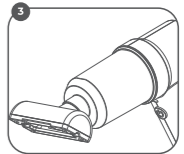

4 Blowing Function:

Need to inflate a lifebuoy or balloon? This accessory has you covered. It's also great for clearing fine dust in gaps like windows and keyboards. Use it for wiping and blowing away dust.

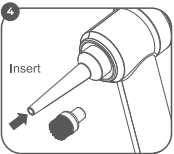

Disassembly and cleaning

- 1 Remove the Dust Bin: Twist the dust bin counterclockwise to easily detach it from the vacuum.
- 2 Dispose of the Mess: Take out the Haipa filter screen from the dust bin and toss the garbage into your trash can.
- 3 Quick Clean-up: Wipe the dust cup with a slightly damp rag or use a disposable paper towel. You can wash the filter screen with water. Just make sure it's completely dry before using it again.
- 4 Put It Back Together: Ready to reassemble? Place the Hepa filter screen back into the dust bin, then twist and tighten it in the opposite direction from step 1.



Product Parameters

Product Name	Rated Voltage	Rated Power	Product Size	Product Weight	Dust Cup Capacity
Wireless vacuum cleaner	7.4V	120W	~ 180x158x66mm	~ 330g	~ 0.1L

Attention Matters:

- 1. Do not remove, repair, or modify this product unless carried out by authorized repair personnel.
- 2. Avoid covering the air inlet or outlet during operation to prevent deformation or overheating leading to a fire hazard.
- 3. While using this product, avoid inhaling combustibles, such as burning cigarette butts.
- 4. Place the product in a safe location, away from children.
- 5. Avoid cleaning the product with highly corrosive liquids like Tianna water, paint, etc.
- 6. If the vacuum cleaner lacks a dust collection bin or filter screen, is damaged, or partially damaged, refrain from use. Replace it promptly to prevent further damage.
- 7. Before charging, ensure the switch is turned off. Strictly avoid using the product while it is charging.