

Heater • User Manual

1. Product Description

The finely meshed grid design of the cover prevents deformation, ensuring faster and safer heat dissipation. The centralized air outlet provides rapid heating, thanks to an aerodynamically designed airflow path. The simple and intuitive control panel with power on/off and adjustable buttons allows for easy operation. With quiet heating and low noise levels, it won't disrupt children's sleep or study, providing a more comfortable experience.

2. Product Parameters

Heater			
Model	NF-1	Rated voltage	110V-230V~
Rated frequency	60Hz	Rated power	800W
Executive standards	GB 4706.1-2005; GB 4706.23-2007;		

3. Usage Instructions

- Before use, please place the heater stably on the desktop or ground, plug it into a 220V~50HZ power socket, and the display screen will display "--" flashing.
- Touch the switch once, the display of the first low temperature range is "65". Touch the switch again, the display of the second high temperature range is "85".
- Touch the switch again to turn off the machine, stop heating, and let the fan work for 15 seconds to cool down before the entire machine stops working.

4. Maintenance and Care


- Avoid getting too close to open flames to prevent discoloration or deformation of the unit.
- Regularly clean the intake and exhaust grille to prevent blockages.
- Use a soft cloth dipped in a neutral cleaning agent to remove surface dirt, then wipe it dry with a dry cloth.

5. Important Notices

- Before initial use, check if the power supply matches the product specifications and ensure the socket used has good grounding. The rated current of the socket should be greater than 5A.

- Do not use this product in environments with flammable or explosive materials, or in areas with excessive dust or oil. The ambient temperature should not exceed 30 degrees Celsius.
- Do not use this heater in bathrooms, near showers, or swimming pools.
- Do not cover the heater, place objects on it, or use it for cooking to prevent fire hazards.
- When cleaning and maintaining, unplug the power plug and wait for the unit to cool down before proceeding.
- When not in use or leaving home for an extended period, turn off the power switch and unplug the power plug.
- If the power cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, their service center, or a similar department.
- The heater must be placed on a flat surface or tabletop.
- Do not touch the protective grille of the heater during operation to avoid burns from high temperatures. Children should be supervised to ensure they do not play with the heater.
- Do not use this heater with devices such as programmers, timers, or any other equipment that can automatically power it on, as covering the heater or incorrect placement can cause fires.
- Do not operate the heater switch or unplug the power cord with wet hands to prevent electric shock.
- The protective grille does not provide comprehensive protection for children or disabled individuals. Children should be supervised to ensure they do not play with the heater.
- This product is only suitable for indoor use. Do not use it outdoors.
- Do not place the heater directly under power sockets and avoid aiming it directly at sockets or other flammable materials.
- Do not bend the power cord to prevent overheating.
- This product is not intended for use by individuals with physical, sensory, or intellectual impairments or those lacking experience and common sense unless they are supervised by someone who can ensure their safety.
- Unplug the power plug before moving the heater, and wait for the unit to cool down before moving it. When moving, handle the heater carefully and do not pull it by the power cord.
- Do not place this product near curtains or indoor furniture. When placing, maintain a distance of at least 50 centimeters from walls and furniture. The top should not be obstructed within 50 centimeters to allow for proper airflow.
- Avoid prolonged use and storage in damp or dusty environments to prevent corrosion of the casing or electrical accidents due to moisture.
- Do not disassemble the unit or modify it in any way to prevent danger.
- A slight sound when the product is powered on is normal.
- Warning: To prevent overheating, do not cover the heater.

7. Warranty Card

customer	Name:	Warranty Period	a year	Purchase date
	Address:			year month day
	Phone:			
Please fill in all sections of this warranty card in detail and affix the retailer's stamp, or it will be considered invalid. Within three days from the date of purchase, if any quality issues are discovered, as long as there is no external damage and the user has not attempted self-repairs, the entire unit (excluding packaging) can be exchanged at the purchase retailer upon presentation of this warranty card. From the date of purchase, the product is eligible for free repair services under normal usage conditions. The following conditions fall outside the scope of the warranty and will incur repair charges:				inspector 
A. Failure to provide this warranty card and related documents. B. Damage caused by improper usage, disassembly, or improper storage by the consumer. C. Damage caused by uncontrollable factors. D. Malfunctions or damages resulting from non-standard household use. E. Exterior wear and tear due to regular usage.				
Dealer signature and seal				

Manufacturer: Fengmei Xiaogianniu Electrical Appliance Factory in Jieyang Airport District
 Address: Xiecuo West Road, Fenglian Community, Fengmei Street, Jieyang Airport Economic Zone