 



FlyNova Pro

Flying spinner with a magic controller

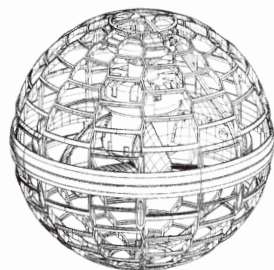

USER MANUAL

 Product Overview

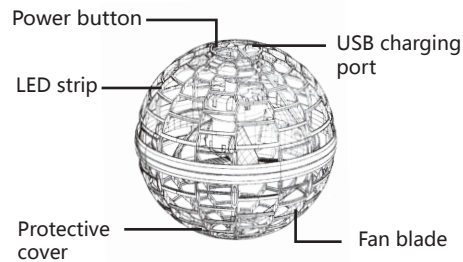

Using Modes

Turn on/turn off

Press the power button on the top of FlyNova Pro with your finger, the LED light bar will flash in different colors. Swing FlyNova Pro with your wrist, and the wind blade will start to rotate. Swing FlyNova Pro again, the wind blade will stop rotating. Press the power button again, FlyNova Pro will stop working.

Boomerang

Hold the FlyNova Pro (horizontal and vertical to the ground) with one hand, tilt it upwards 15° to 45° and throw it out, the FlyNova Pro will fly back in the original direction. Hold the FlyNova Pro (horizontal and vertical ground) with one hand and tilt it 15° to 45° to the upper left or upper right. The FlyNova Pro will fly out in an offset direction, and then fly back to another target position along the offset direction. Tips: When throwing FlyNova Pro, the greater the tilt angle, the faster the flight speed. It is recommended to perform small-angle tossing exercises first, and then gradually perform larger-angle tossing exercises as the training time increases.

levitate

Hold FlyNova Pro (horizontal and vertical to the ground) with one hand, then release the rotating FlyNova Pro, place your palm on the bottom 1cm-5cm, and move slowly. The FlyNova Pro floating in the air will move slowly with the palm of your hand.

Fly to the target

Hold the FlyNova Pro with one hand (horizontal and vertical to the ground), tilt it 15° to 65° downward toward the target, release the rotating FlyNova Pro, and flynova pro will fly towards the target. Hold FlyNova Pro with one hand (horizontal and vertical to the ground) and tilt 15° to 65° to the left front or right front. FlyNova Pro will fly out of the left front or right front offset, and fly back to another target position along the offset direction.

Soar and Magnetic levitation (Need to buy a magic wand)

When FlyNova Pro is in suspension, use the magic wand to swing once, FlyNova Pro will fly upwards and change the light color, and swing the magic wand again, FlyNova Pro will continue to fly upwards and change the light color again. After stopping the operation of the magic wand, FlyNova Pro will gradually fly downwards freely. (You can also use the buttons on the magic wand to replace the "swing" action) Use the five-pointed star on the magic wand to magnetically attract the FlyNova Pro to fly, and quickly get rid of the FlyNova Pro with your wrist force, and it can become a floating flight state.

Product Parameter


Product name	FlyNova Pro
Colour	Blue / Red / Pink
Battery type	Lithium ion polymer battery
Main material	PP plastics
Charging time	About 25 minutes
Battery life	8-10 minutes
Suitable for age	Over 6 years old
Product Weight	27g
Product Size	95mm * 95mm * 95mm

Precautions

1. This product contains a non replaceable battery. Please do not disassemble it or let the battery get damp.
2. If the toy is heated seriously, don't charge it. Let it cool before charging.
3. Please avoid strong impact and exposure to direct sunlight.
4. It is recommended to charge the FlyNova Pro with an adult.
5. Do not charge in an extremely hot or cold environment.
6. Keep away from flammable and explosive materials when charging.
7. Toys should not be used by children under 6 years old.
8. Before playing FlyNova Pro, please fully charge and keep the top up.
9. When playing outdoors, please avoid rivers, road, buildings, etc., and have enough safe space to walk around.
10. Don't play with FlyNova Pro in bad weather such as rain, snow, thunder, electricity and strong wind, so as to avoid injury or damage to the product
11. Do not fly FlyNova Pro to light bulbs, light tubes, glass and other fragile products.
12. Never charge the product unattended for a long time. Disconnect the charger after the product is fully charged
13. To protect the battery life, please turn off the power of FlyNova Pro before charging.


FlyNova Pro

 带魔术棒的飞转盘

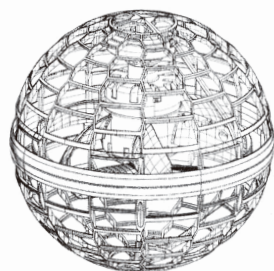

用户手册

 产品总览

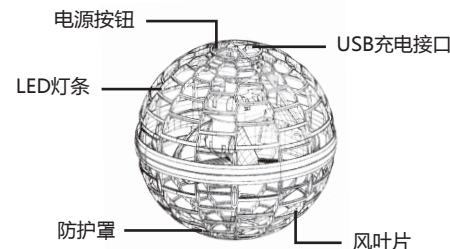

使用模式

打开/关闭

用手指按下FlyNova Pro顶部的电源按钮, LED灯条将以不同的颜色开始闪烁。用手腕摆动FlyNova Pro, 风叶片将开始旋转, 再次摆动FlyNova Pro, 风叶片将停止旋转。再次按下电源按钮, FlyNova Pro将停止工作。

回旋

一只手握住FlyNova Pro (水平和垂直于地面), 将其向上倾斜15°至45°并抛出, FlyNova Pro将会沿原始方向飞出与飞回。用一只手握住FlyNova Pro (水平和垂直地面) 并将其倾斜15°至45°至左上或右上。FlyNova Pro会向偏移方向飞出, 然后沿偏移方向飞回另一个目标位置。提示: 扔FlyNova Pro时, 倾斜角越大飞行速度越快。建议先进行小角度的抛掷练习, 然后随着训练时间的增加逐渐进行大角度的抛掷练习。

悬浮

一只手握住FlyNova Pro (水平和垂直于地面), 然后释放旋转的FlyNova Pro, 将手掌放在底部1厘米至5厘米处, 慢慢移动漂浮在空中的FlyNova Pro将沿着手掌慢慢移动。

飞向目标

用一只手 (水平和垂直于地面) 握住FlyNova Pro, 向下倾斜15°至65°, 释放旋转的FlyNova Pro, Flynova pro将飞向目标。用一只手 (水平和垂直于地面) 握住FlyNova Pro, 并向左前或右前倾斜15°至65°, FlyNova Pro将飞出左前方或右前方偏移, 然后沿偏移方向飞回另一个目标位置。

悬浮和磁悬浮 (需要购买魔术棒)

当FlyNova Pro处于暂停状态时, 挥动魔术棒, FlyNova Pro将向上飞行并更改灯光颜色, 再挥动魔术棒, FlyNova Pro将继续飞行并再次更改灯光颜色。在停止魔术棒的操作之后, FlyNova Pro将逐渐向下飞行。(您也可以使用魔术棒上的按钮替换“摇摆”动作) 使用魔术棒上的五角星吸引磁力吸引FlyNova Pro飞行, 并迅速用腕力摆动FlyNova Pro它可以变成悬浮的飞行状态。

产品参数

产品名称	FlyNova Pro
颜色	蓝色/红色/粉红色
电池类型	锂离子聚合物电池
主要材料	PP塑料
充电时间	约25分钟
电池续航时间	8-10分钟
适合年龄	6岁以上
产品重量	27g
产品尺寸	95mm * 95mm * 95mm

注意事项

1. 本产品包含不可更换的电池, 请不要拆卸它或让电池受潮。
2. 如果玩具严重发热, 请勿对其充电。
3. 请避免强烈的冲击和阳光直射。
4. 建议在成人的指导下对FlyNova Pro进行充电。
5. 请勿在过热或过冷的环境中充电。
6. 充电时, 请远离易燃易爆材料。
7. 6岁以下的儿童请勿使用玩具。
8. 在玩FlyNova Pro之前, 请先充满电。
9. 在户外玩耍时, 请避开河流, 道路, 建筑物等, 并留有足够的安全空间可走动。
10. 请勿在恶劣天气下使用FlyNova Pro, 例如雨, 雪, 雷电, 强风等, 以免造成伤害或产品损坏。
11. 请勿将FlyNova Pro与灯泡, 灯管, 玻璃或其他易碎产品放在一起。
12. 切勿长时间对产品充电, 产品充满电后应断开与充电器的连接。
13. 为了保护电池寿命, 请在充电前关闭FlyNova Pro的电源。