

正面



Warning

1. It is a high-precision product, do not fall or crash.
2. Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
3. Never leave the products exposed to high temperatures and direct sunlight.
4. Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
5. Do not place Micro SD card near strong magnetic objects to avoid data loss.
6. In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
7. While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
8. Keep the device in cool, dry and dust-proof places.

Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, photos shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, home security, deep-water probing, etc., allowing you to film at anytime, anywhere. And it has variety of patents.

1





Product Features


- >A water-resistant casing that allows you film fascinating water sports; water-resistant up to 30 meters under water.
- >High definition screen that displays and replays fascinating videos record.
- >Detachable battery that is easy to replace and prolongs your camera's service life.
- >Video recording while charging.
- >Video recording with battery.
- >12-megapixel HD wide-angle lens.
- >HDMI HD output
- >Web camera.
- >Support storage cards up to 64GB maximum.
- >Multiple video recording formats: 4K 30fps / 2.7k 30fps / 1920*1080 60fps / 1920*1080 30fps / 1280*720 120fps
- >Recorded in AVI format.
- >Multiple photo shooting modes: single shot, snapper.
- >Video encryption enabled.
- >Mini appearance, diversified colors available
- >Open WiFi button within the menu, it will be more convenient to operate the machine by using a mobile phone

2


Pictures of Product

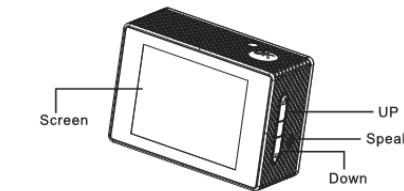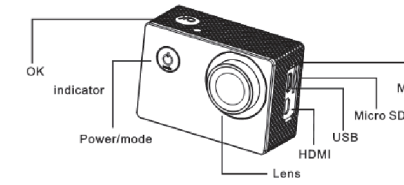  

3

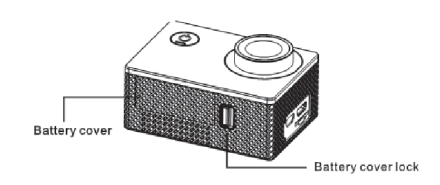 

Pictures of Waterproof Case

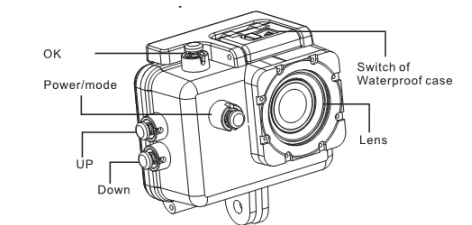 

4

反面



5



6

1. Inserting Micro SD cards

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

2. Installing and removing batteries

- Press on battery cap to open it.
- Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- Battery gauge: please refer to diagram.
- Remove battery: open cap to take battery out.

3. Charging

- Charging can be done by either connecting power adaptor to computer or power adaptor.
- Charge on vehicle by connecting it to car charger.
- It can record video while charging.

Note: When it is connected with power and automatically video recording, charging can be done even when long press power switch.

4. Switching camera on and off

Press and hold power switch for 3 to 5 seconds to turn it on /off. Short press DOWN button to turn on Wi-Fi.

5. Mode Switching

Switch between video recording / photo shooting / playback /menu by pressing "Power On-Off button.

6. How to record videos and configure recording setting

- Video Recording
Switch to recording mode and there'll be an STBY icon in the upper left corner of

7

screen. Press OK to start recording and the REC icon in the upper left corner will start to flash. Press "OK" again if you want to stop.

Resolution of videos recorded: 4K 30fps / 2.7k 30fps / 1920*1080 60fps / 1920*1080 30fps / 1280*720 120fps

Note: The default recording mode is loop. Not enough storage space available for the recording, the later files will overwrite to the earlier ones. Please choose and adjust your modes according to the menu.

b. Photo Shooting & Setting

Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an STBY icon in the upper left corner of display screen and camera is in photo shooting mode. Press "OK" to take photos.

Shooting Pattern: Single shot / Self-timer (3S/5S/10S/20S) / Continuous Shooting

c. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you take Micro SD card out and access the image data with a card reader.

6. Install and use WiFi

WiFi connection (for WiFi model)
Please download and install "GoPlus CamPro" application on your smart phone before starting WiFi function. PS: Android, please download at Google Play IOS, please download at Apple Store. The domestic can be downloaded in the mobile phone 360

Connecting step:
A. When turned UP, press and hold the button appears on the wifi icon, then the wifi light blinks;
B. Finding out "GoPlus CamPro" network on your smart phone, then connecting it by entering the original password:12345

C. Operating the GoPlus CamPro application
Now you can preview in real time and remote control your camera on your phone, also you can download files from the camera to your phone

Setting Wifi password:
You can re-set the wifi password in the setting mode
Disconnecting the Wifi connection:
press and hold the UP button until the "Waiting for wifi connection..."disappearing on the screen

8

Liquid Crystal Display	2.0/TFTS
Lens	170°A+ wide-angle lens
Resolution of Videos Recorded	4K 30fps / 2.7k 30fps / 1920*1080 60fps / 1920*1080 30fps / 1280*720 120fps
Video Format	AVI
Resolution of Photos	13M / 12M / 10M / 8M / 5M / 3M / 2M / 1.3M / VGA
Storage	MicroSDHC Class10 64GB
Shooting Mode	Single Shot/Self-timer(3S/5S/10S/20S) / Continuous Shooting
WiFi Support Phone System	iOS6.1 and above, Android 4.0 and above.
WiFi Function	Image transmission, remote control, settings, sync and sharing albums
Frequency of Optical Source	50Hz/60Hz
Connections	USB2.0/HDMI
Power Source Interface	5V/1A
Battery Capacity	900MAH
Recording Time	1100P/About 90 minutes
Charging Time	About 2 hours
Operating System(OS)	WindowsXP/7/8/SP3/VistaandMac10.Sorabove
Dimensions	29.8x59.2x41mm
Applications	Extreme sports, outdoor sport activities, bicycle car DVR, diving, home security etc.
Additional features	Can be used for car dash camera. Can be used for as a dash camera (Audio Start)/Stop Recording when charging/hot charging. Can record via Motion-Activation for Home security use.

Note: Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

9