

Product Introduction

产品介绍

- Product Name : Robotic Vacuum Cleaner
 产品名称: 智能扫地机器人
- 3.Charging Time : 4h 6h (USB Charging) 充电时间: 4小时至6小时(USB 充电)
- 5.Working Hours : 60min 续航时间: 60分钟以上

- 2.Product Specification: 250 x 250 x 68mm 产品规格: 250 x 250 x 68mm
- 4.Product Weight : 758g 产品重量: 758克
- 6.Working Voltage : 3.7V/1200mAh 工作电压: 3.7V/1200mAh



1.This product is a robotic vacuum cleaner, dusting and mopping functions. 本产品是一款具有除尘,和拖地功能的机 器人吸尘器。



2.Before the first ues of the product, remove the insulation sheet on the battery cover and connect the battery correctly (as shown) 在产品第一次使用前应将电池盖上的隔电片 取下,正确连接电池即可(如图所示)。



3.The brush on the back of the machine can be installed, removed and cleande. 机器背面的毛刷可安装,拆卸下来清洗。



 Now it can be used normally Press the power switch and the battery indicator is blue.

现在可以正常使用了。按下电源开关,电 池指示灯为蓝色。



5 The function of mopping the floor:iust paste the mopping cloth at the bottom of the product correctly.

拖地功能只需将魔术贴和拖地布贴在产 品底部即可。



6.Low voltage indication.When the blue light flickers,please turn off the switch in time to charge the product. If the product has stopped working,please charge the product after pressing the switch once. 低电压指示,当蓝光闪烁时,请及时关闭

低电压指示,当蓝光闪烁时,请及时关闭 开关为产品充电。如果产品已经停止工作, 请按下开关一次后再充电。



7.Pull up can be pulled out of the dust box plate. 手指处向上提可以拔出尘盒中板。



8.Pull out the partition board of the dust box and clean up the dust inside e dust box 仔细清洁尘盒和中板,然后重新装回。



 Reload the dust box for the next use. 重新装好尘盒, 以备下次使用。

Functional note/功能备注:

- 1. This product has a long battery life,60 minutes of continuous operation,USB charging, the indicator light is blue .
- 2.Lengthen the brush without dead ends.

3.Low noise.

- 1. 此产品超长续航,可持续工作60分钟,USB充电,指示灯亮蓝色。
- 2. 加长扫刷无死角。
- 3. 降低噪声。